


röhr

Montageanleitung
A04107.01




961616
(1 X)



085100
(1 X)


Der Gurt kommt nur bei Betten
ab einer Breite von 120cm
zum Einsatz!

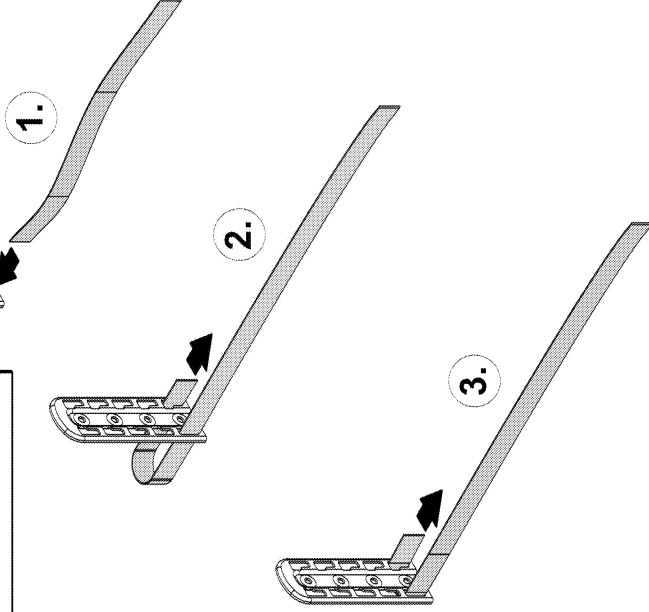

0120220

röhr

Montageanleitung
A04107.02




961616
(3 X)



096525
(12 X)




8 x 30
092713
(4 X)

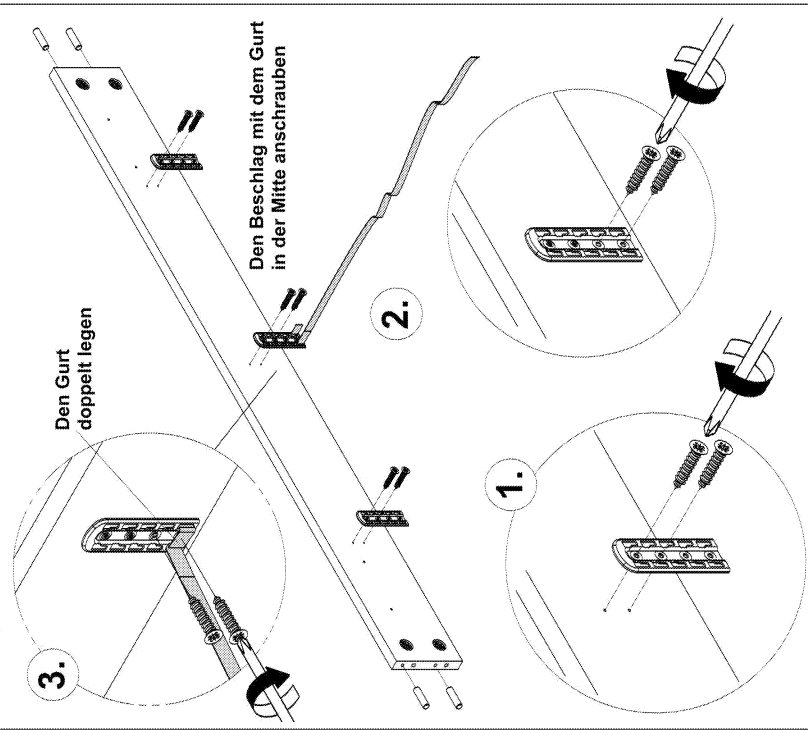

röhr

Montageanleitung
A04107.03



961616
(2 X)




096525
(6 X)




8 x 30
092713
(4 X)

in der Mitte keinen
Beslag anschrauben!

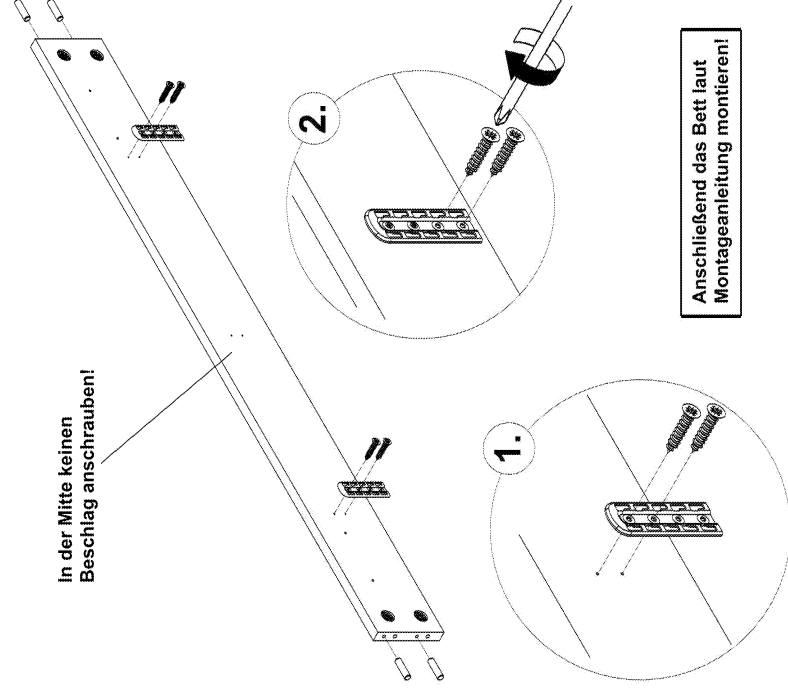


röhr

Montageanleitung
A04107.04



961616
(1 X)

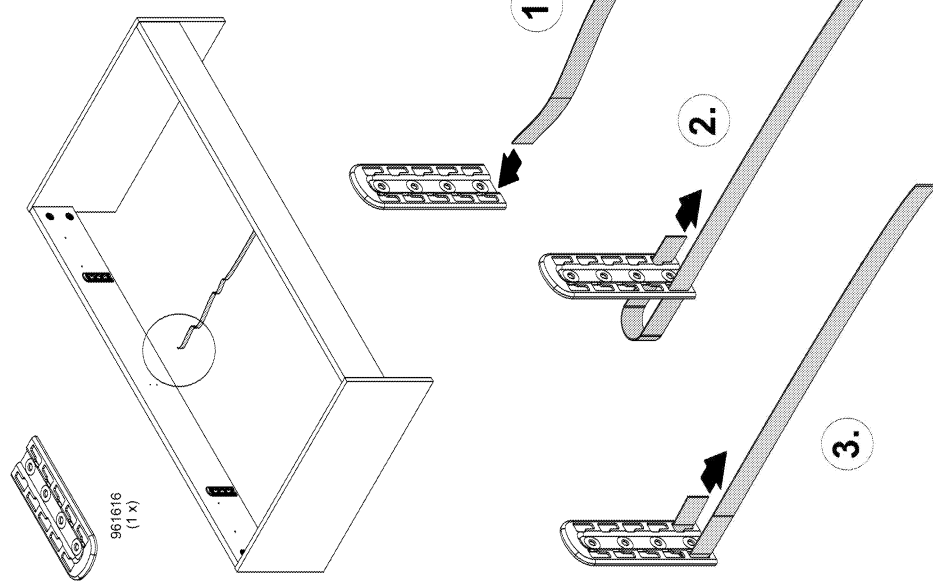



röhr®

Montageanleitung
A04107.05



4,5 x 25

096525
(2 x)

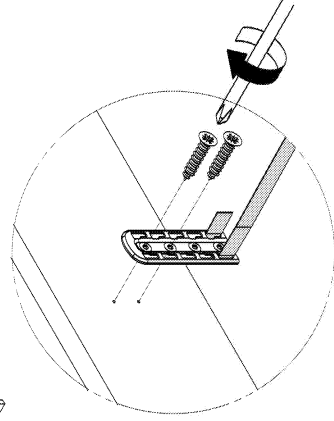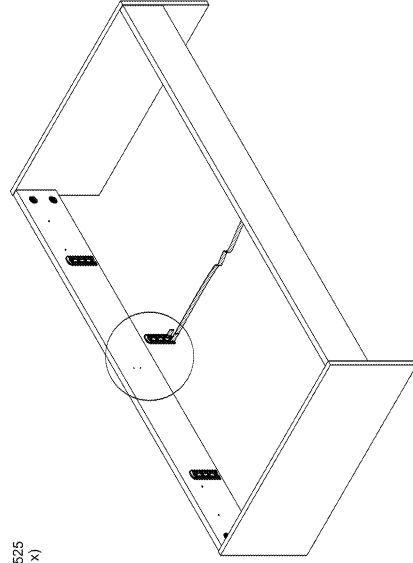


röhr®

Montageanleitung
A04107.06




4,5 x 25


096525
(2 x)

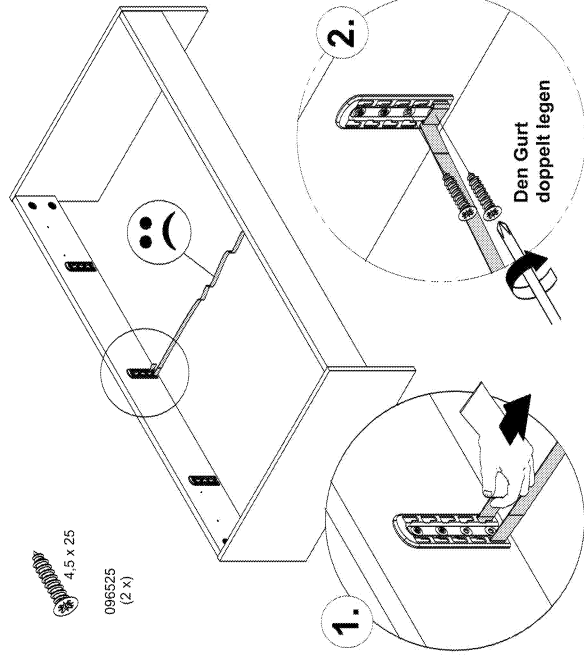

1.

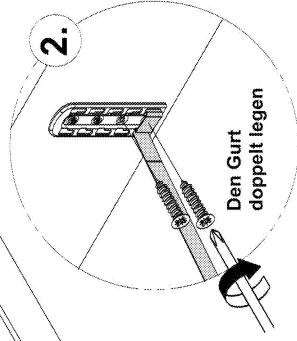

2.

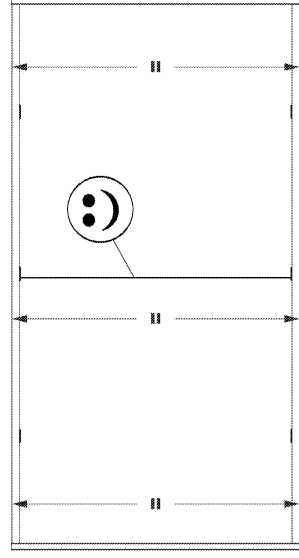


röhr®

Montageanleitung
A04107.07



961617
(6 x)

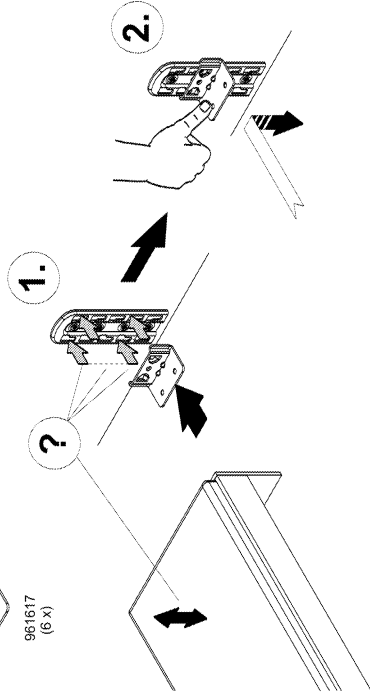

1.

2.

